


INSTALLATION INSTRUCTION


Parallel connection kit

OZXA40-41

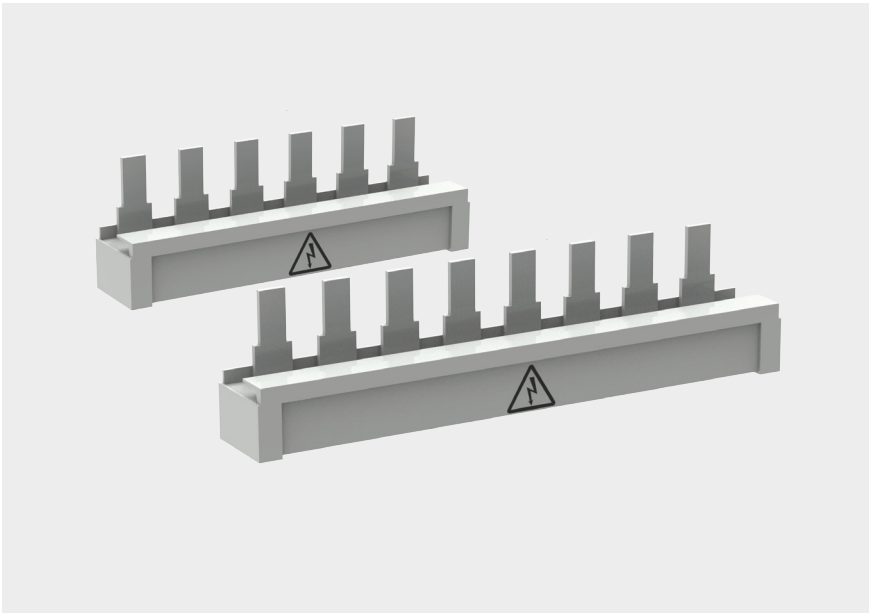


OZXA40



1

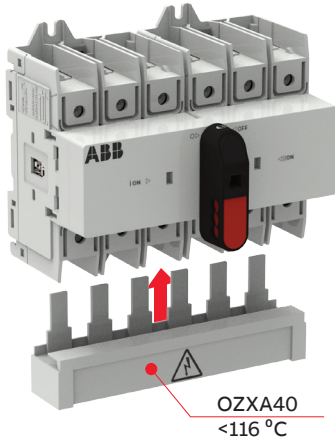

2

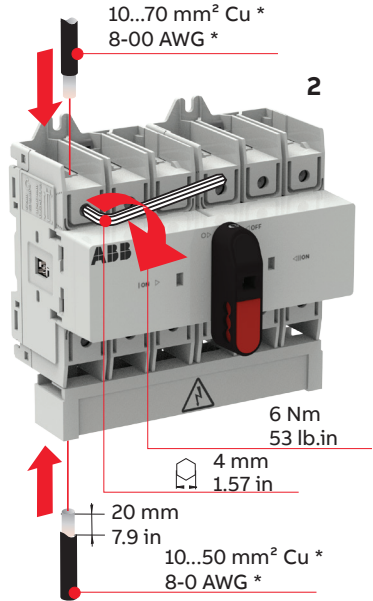

3

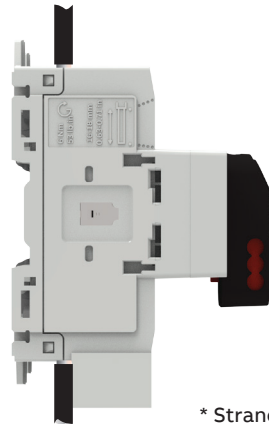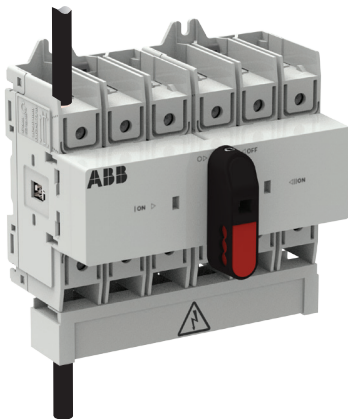


A00147A


* Stranded

OZXA41



1

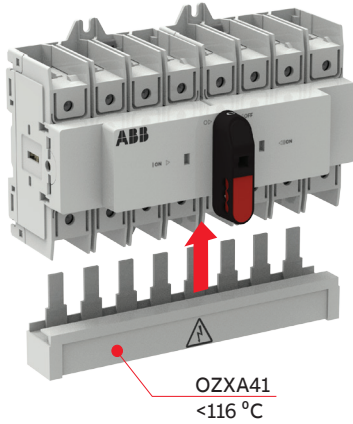

2

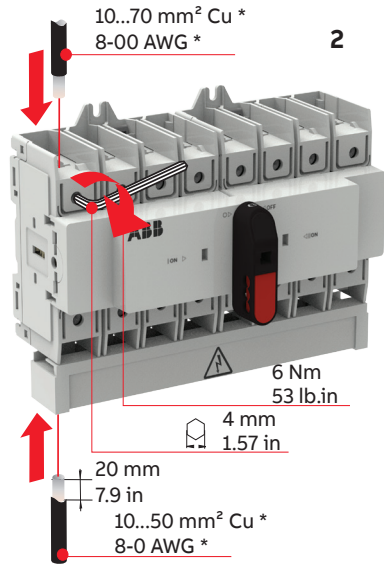

3

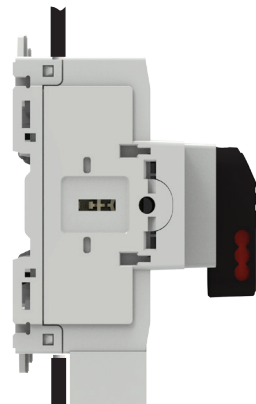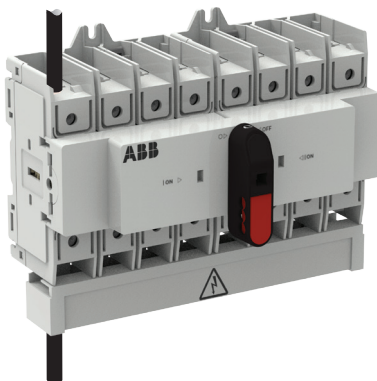

A00148A

* Stranded



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage