




—
INSTALLATION INSTRUCTION

Terminal shroud

OTS125FL3

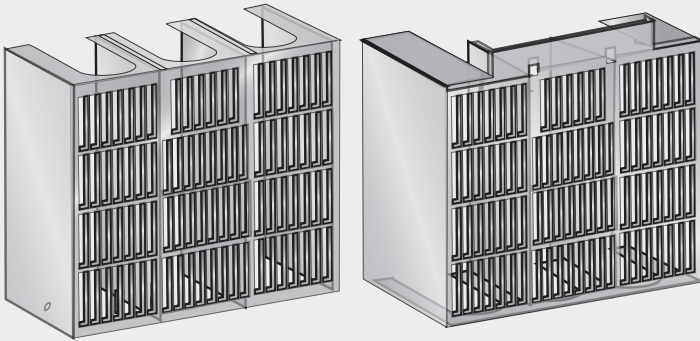


OTS125FL3

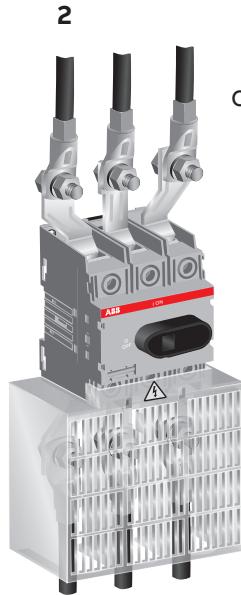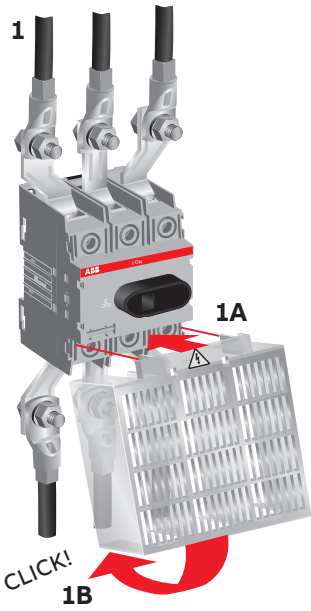

Or:



OTS125FL3

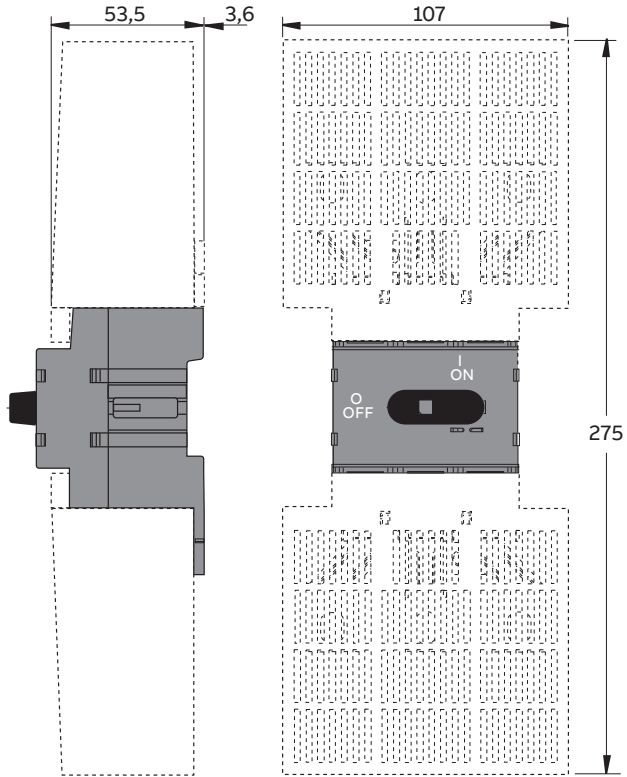



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage