


—
INSTALLATION INSTRUCTION

Handles

OH_ZV/X


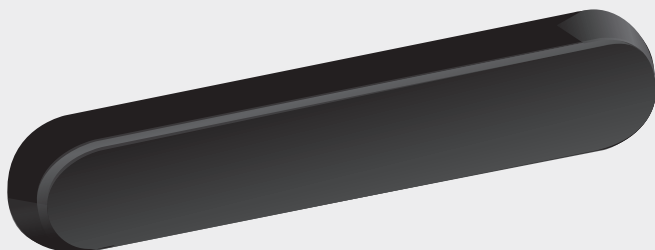


OHBZV95-125


OHBZV95-125



1

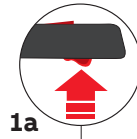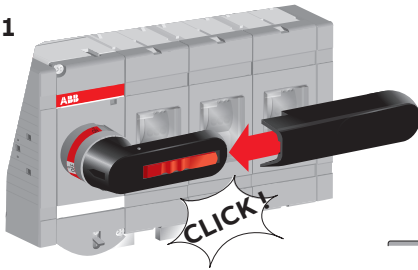


1a

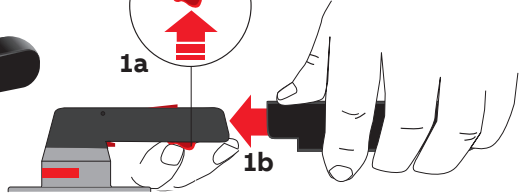


1b

2




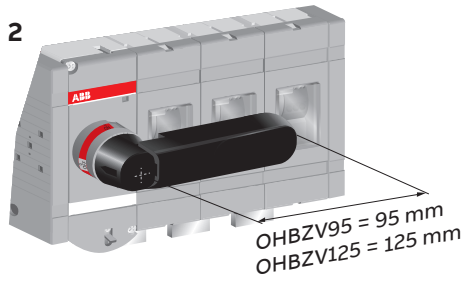


Remove

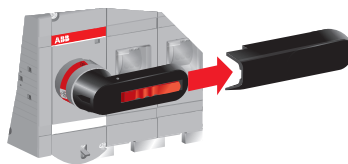


OHBZX200-275

OHBZX200-275

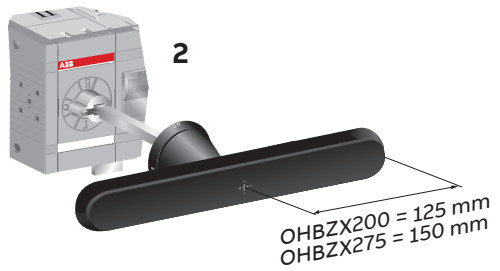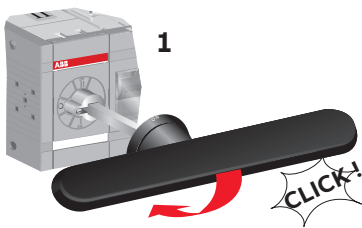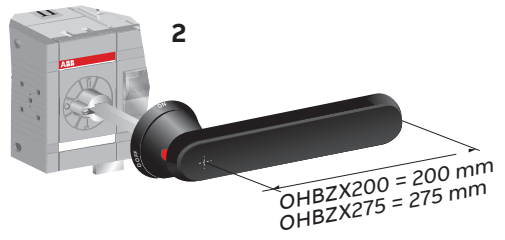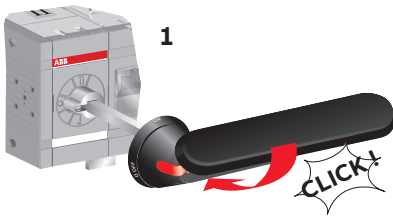

Remove

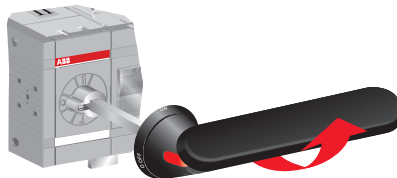

A06176



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage